CT6K01(11)
6MN72411-01

Nikon
KeyMission 80

En Procedure for Pairing for the First Time (for iOS Users)

Here, pairing refers to the setting used to connect the camera and smartphone or tablet (below, "smart device") through Bluetooth.

Parts of the Camera

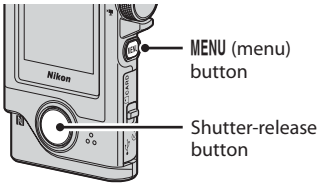

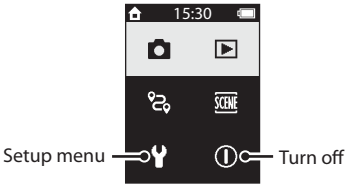

Before Pairing

Camera

- Insert a microSD memory card with sufficient free space into the camera.
- Check that the battery is sufficiently charged so that the camera does not turn off during the procedure. **The camera cannot be charged when it is set in the camera holder.**
- To turn off the camera, press the MENU (menu) button and tap ⏻ (turn off).

Smart device

- Two types of apps are available: "**SnapBridge**" and "SnapBridge 360/170". Use "**SnapBridge**" when pairing with this camera.
- **Do not pair from the Bluetooth setting screen of the smart device.**

Pairing Procedure

1 Check that the camera is off (the screen is off).

2 Enable Bluetooth and Wi-Fi® on the smart device.
- **Do not pair from the Bluetooth setting screen of the smart device.**

3 Install the SnapBridge app.

4 Press the shutter-release button or the MENU (menu) button to turn on the camera.
- On the language selection dialog, select a language by tapping.

5 Scroll through the screen, tap **Set**, scroll through the next screen, and then tap **Next**.
- The camera enters pairing standby mode.

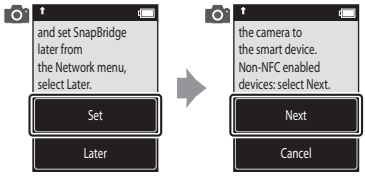

> **If You Tap Later**
>
> You can pair later by performing the following operation.
> MENU button ➔ setup menu ➔ **Camera settings** ➔ scroll through the screen, then **Network menu** ➔ **Connect to smart device**

6 Scroll through the screen on the camera and when the screen shown on the right is displayed, launch the SnapBridge app on the smart device.

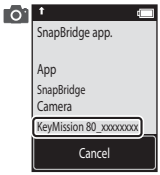

7 When the screen shown on the right is displayed on the smart device, tap the camera name.

- When the accessory selection screen is displayed, tap the camera name after the Bluetooth icon in top right corner of the smart device screen changes from white to grey. It may take a while before the camera name is displayed.

8 Check the authentication code.

- Confirm that the camera and smart device display the same authentication code.
- Perform the following operations on the camera and smart device at the same time.
  - On the camera, tap **OK**.
  - On the smart device, tap **Pairing** (the name of the button varies with the OS version).

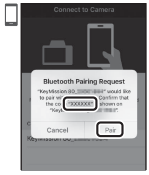

9 Follow the on-screen instructions to complete the pairing process.

- Camera: If pairing is successful, the screen shown on the right is displayed. Tap **Next**, and then follow the on-screen instructions.
- Smart device: Follow the on-screen instructions.

When You Cannot Pair

Perform the following and then pair again by proceeding to "Pairing Procedure".

- Press the **MENU** (menu) button on the camera, and then tap ⏻ (turn off) to turn off the camera.
- Close the SnapBridge app.
- Remove the Bluetooth device (registered as the camera name) in the Bluetooth setting screen of the smart device.

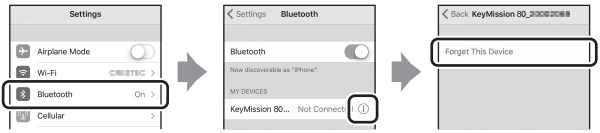

To Learn More About Using the SnapBridge App

See the online help (tap **Other ➔ Info/settings ➔ Instructions** in the app).

Trademark Information

- The *Bluetooth*® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Nikon Corporation is under license.
- iOS is a trademark or registered trademark of Cisco Systems, Inc., in the United States and/or other countries and is used under license.
- Wi-Fi and the Wi-Fi logo are trademarks or registered trademarks of the Wi-Fi Alliance.

Password for Wi-Fi Connection

- You can check the password in setup menu ➔ **Camera settings ➔ Network menu ➔ Wi-Fi ➔ Current settings**. The default password is "NikonKeyMission". The password is case-sensitive.
- We recommend that you change the password to protect your privacy. You can check or change the password in setup menu ➔ **Camera settings ➔ Network menu ➔ Wi-Fi ➔ Current settings ➔ Password**.